


2010+ Camaro V6, RS, LS, and LT Front Fascia T5 Splitter Instructions  
Pn 33-4-101

### Packing List


- 1- Chevrolet Camaro T5 V6 Front Splitter
- 3 - M8x1.25 x20 Bolts
- 6 - M8 Washer
- 3 - M8 Nut
- 10 - Clips
- Instructions
- Proudly Packaged by \_\_\_\_\_




1. Observe proper precautions and safety procedures while performing the following.
2. Raise vehicle to a comfortable working height.

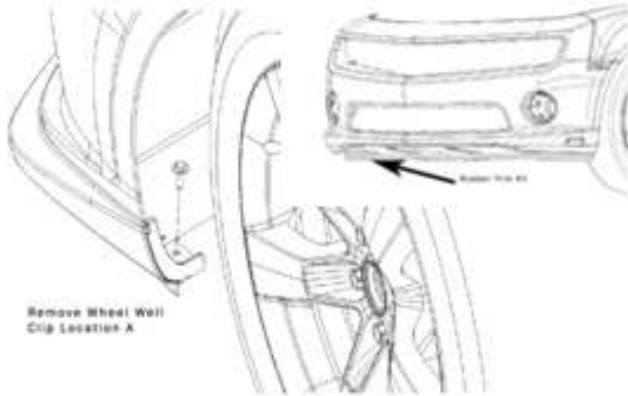

3. Remove clip located at each extremity of the bumper in front of the front wheel.

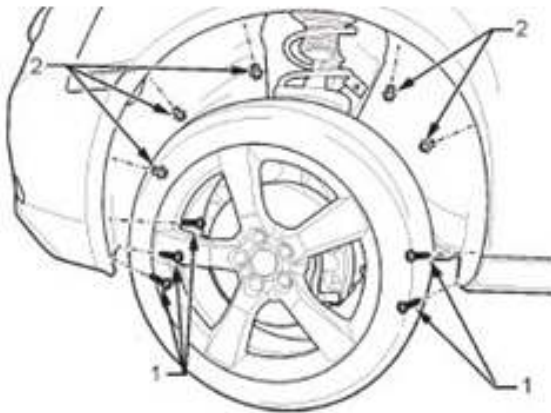


5. Remove the front wheel well liner by removing three screws in the front and two screws from the rear of the liner (1). Use a trim release tool to remove five screws (2) and remove the liner. Repeat steps on the RHS of the vehicle

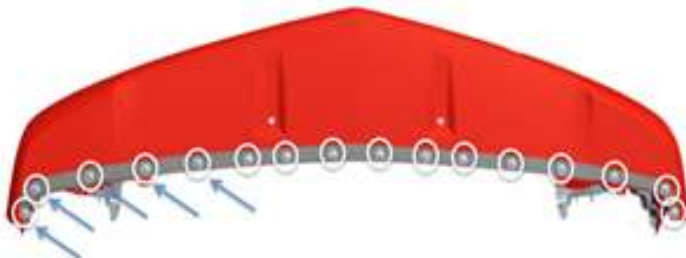

4. Remove the under carriage rubber seal located at the end of the fascia. Save the clips and seal. These will be reinstalled once the T5 splitter is mounted.

2010+ Camaro V6, RS, LS, and LT Front Fascia T5 Splitter Instructions  
Pn 33-4-101

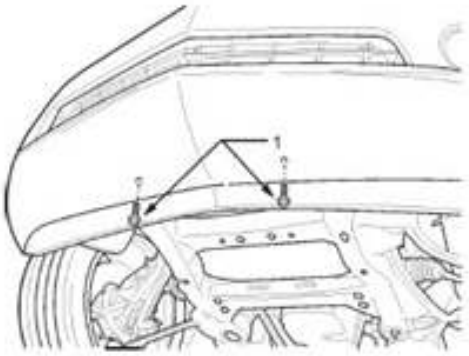

5. Remove two 10 mm bolts located in the center of the fascia. Save these, as they will be reused to mount the T5 Splitter.



6. Position the splitter onto the fascia. You may need an assistant's help or clamps to hold in position.



[acscomposite.com](http://acscomposite.com)

7. Install the two center 10 mm bolts. At this point you will need to ensure the splitter is properly located. It needs to be flush at both extremities and centered. If need be, slightly enlarge the center holes. Temporarily fasten a M8 nut and bolt on the extremities. (Circled position in the image) both the driver's and passenger end.


These are purely used to help you locate the splitter. At this point the splitter should be flush at both extremities.





acscomposite.com

9. Remove the M8 bolt from step 7 and reinstall in the circled position. M8 bolt and washers need to be installed at circled positions.

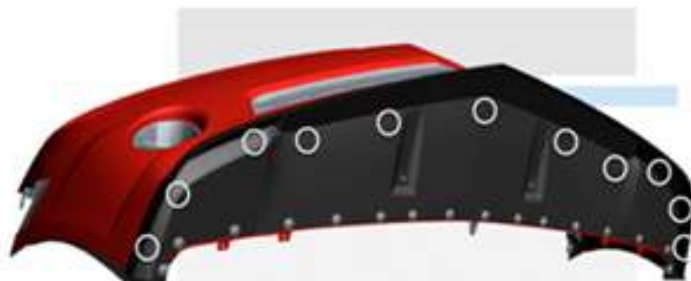


acscomposite.com

8. Using the splitter as a template. Start from the centre, drill an 8 mm (5/16") diameter hole and install a pressure clip ensure the fascia and splitter are close together.

Continue drilling holes alternating each side and installing clips.

10. Reinstall the rear rubber deflector using the original fasteners.

Reverse step 5 to reinstall the wheel well liner.

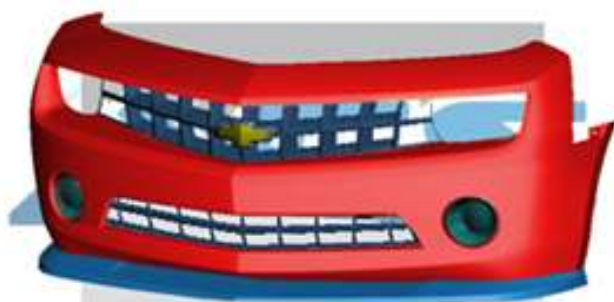

ACSCOMPOSITE.COM

TS

Acx TS Splitter for Camaro LS, LT, RS, V6-Pn.33-A-101

11. Congratulations! Installation is now completed. We invite you to share images on our Facebook Page. Simply search:

**Advanced Composite Specialties.**

Also join us on Camaro5.com. The largest online Camaro 5<sup>th</sup> Gen community.

For questions or comments please email us at:

[info@acscomposite.com](mailto:info@acscomposite.com)