


Step2- Run the wiring under the carpet seam if you have the after-market plush carpet piece. If you do not you will either need to poke a small hole in the carpet or run it up under the weather stripping. The idea is to get the wiring back behind the rear carpet panel so that you can gain access to the power harness. Hide the wire so that it is not seen.



Step3- Remove the screw grommets that hold the back carpet panel in place. Pull the carpet panel out a bit so you can locate the wiring harness behind it. This harness connects to the tail light. The harness may have tape or a covering over it. Peel back the tape so that you can clearly see the wiring. Get the red clamp we sent in the tackle package. There are two wires coming off of the glow plate. See illustration below about how to use the red clamp. Hook the positive wire from glow plate up to the power source of your choice.



The brown wire will give you lighting anytime your head lights are on. The yellow wire will give you lighting anytime you step on the brake pedal. Ground the remaining wire, negative from glow plate to the black wire in that same harness. If you have any of the accessories please refer to the individual inserts that came in the box. If you do not want to hard wire the product, you can order the 12V plug and plug it into your dash or use a battery pack. We do recommend hard wiring it though for best illumination.

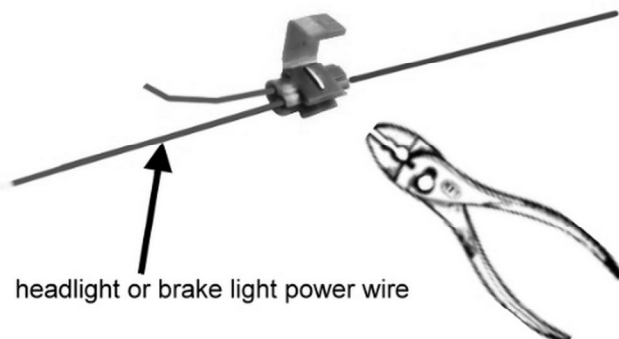

WindRestrictor® "Lighted Glow Plate" C6 *non-convertible 2005-2013*

All GM Trademarks used
under license to King Penn
Industries Inc.

Sales@windrestrictor.com
972-487-5987

*These instructions are modified for the
non-convertible Corvette C6.*

INSTALLATION

Step1- Slide the product down into place with the graphics facing the rear of the vehicle. See photos "A,B,C" to determine the exact spot to wedge the glow plate. The mechanism that the arrows are pointing to are designed to hold the top in place when it's removed. The glow plate is installed directly in front of this plastic mechanism. The pads that are on the ends should face the front of the vehicle. There are two extra pads just incase.

