



WINDRESTRICTOR®

windblocker designed for the
2014+ C7 Corvette Stingray Convertible


TOOLS NEEDED

heat gun or hair dryer


IN THE BOX- 1 wind blocker with brackets attached, 2 alcohol pads,
2 cotton gloves, 1 cleaner and rag, 1 power supply (if lighted version)

video= <http://www.youtube.com/watch?v=LbJM9IZK8QA>


Step-1 Clean these two insert panels with the alcohol pads
provided in the box.

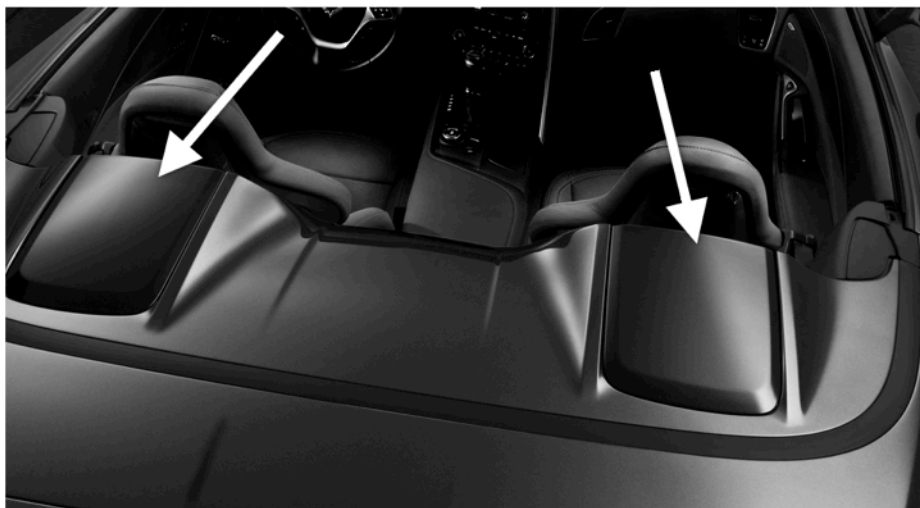



Step-2 Remove the lining from adhesive pads on brackets.

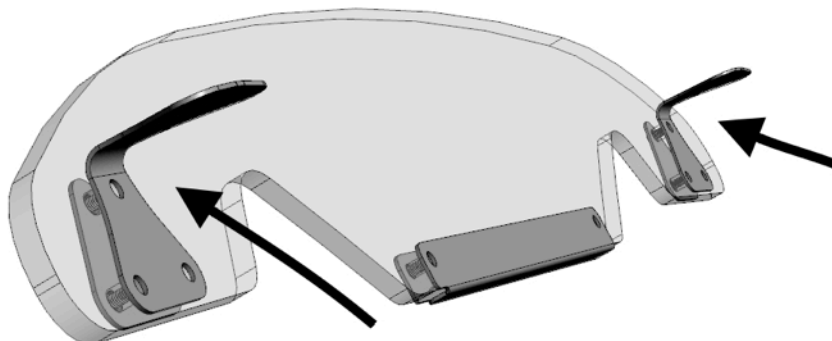

Step-3 Use a heat gun or hair dryer to heat up the adhesive pads on brackets. Five seconds on each pad should be good enough. Do not overheat or damage pads.

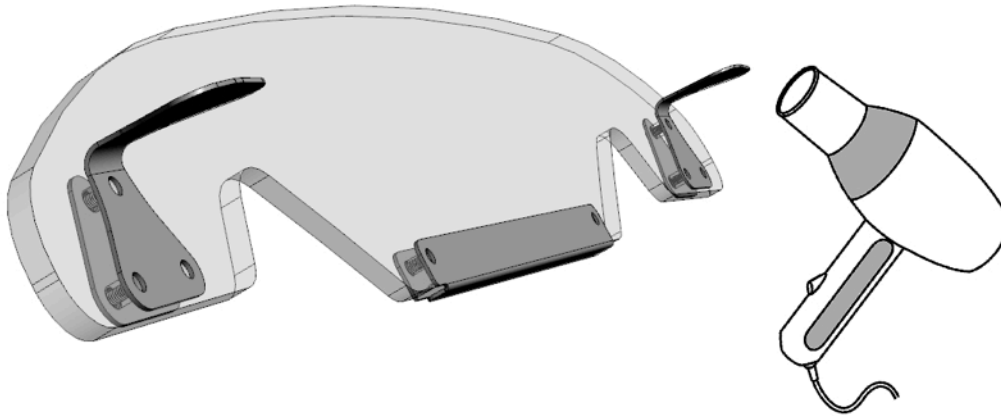

Step-4 Center the windblocker from left to right on the panel then press firmly to mount. The two screws on steel bar (A) should perfectly line up with the two indentions on tonneau cover. (B) After confirming the product is centered apply firm pressure to both the front side of bracket and top side of bracket for 20 seconds. If you have the LED lighted version proceed to step 5. If you do not have the lighted version you are now finished!

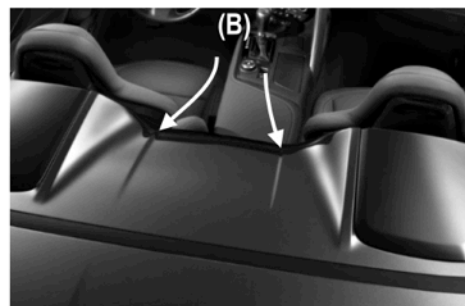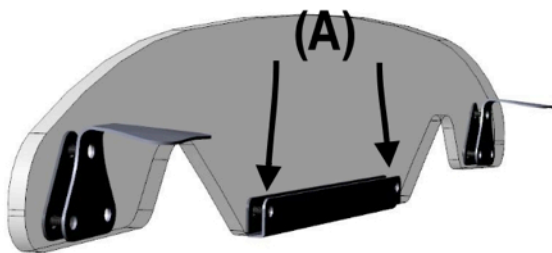



Step-5 Attach the 12V power supply to the cord from wind blocker. Peel off the adhesive cover that is on the back of power supply. Mount the box under the lid as shown below. be sure the adhesive side goes towards the rear of vehicle. There should be a flat area just above where the speaker panel meets the tonneau cover. The power supply should be mounted as far up as possible, so that it is out of the way of the panel when closing and opening the top. It may be helpful to refer to our installation video on this step.



That's it! You are now ready to use your new WINDRESTRICTOR® brand wind blocker!

ABOUT THE POWER SUPPLY

The power supply will hold a full 35 hour charge. If used at the average rate per night it should last around 6 weeks before needing to recharge. When you need to recharge, first unsnap it from the panel and unplug from the wind blocker. Then using the plug that came with it, plug it in the wall for around 4-5 hours. When you are charging it make sure the switch is in the ON position or it will not recharge.