

C7-Z06 Removable/Lockable Front Plate Instructions

Thank you for purchasing the most innovative front license plate holder for your C7-Z06 Corvette.

Installation:


- Screwdriver required
- 2 1/2"x 1/4" -20 bolts (included)

Optional: (not included)

- Small padlock(s)
- 1 or 2 1/8" bolts/nuts

Instructions:

- 1) Place the left edge of plate bracket into lower grill opening (about a 45° angle).

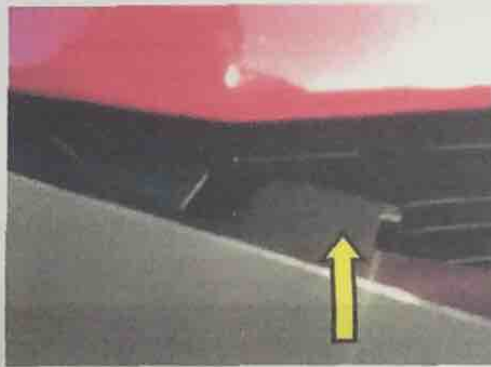

- 2) Rotate right tab into position while depressing right latch fully.



- 3) Verify that holes of moveable plus outside bracket can be seen from top to ensure proper placement. If not, recheck lower tabs and upper tabs for correct position and adjust.



CORRECT FINAL POSITION



- 4) Plate can be secured with bolts or padlock(s) if desired.
5) Slip license plate into frame and secure with 1/2" bolts.

NOTE: THIS IS DESIGNED FOR HOLDING PLATE ONLY. DO NOT ATTACH ANY
LICENSE PLATE FRAME.

Innovative Automotive Products
fastlinetrackpro@gmail.com
303.888.8180