
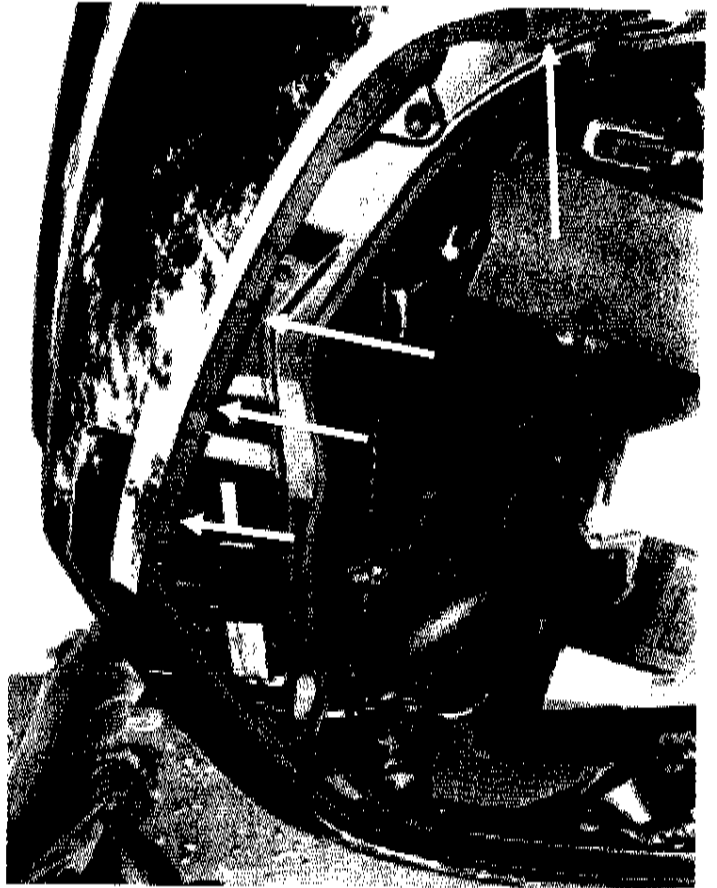


11/05/09 SSE 950-80224

PAGE 1

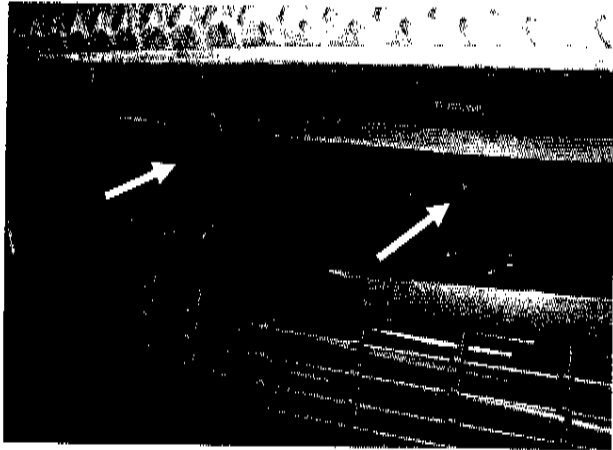

1. Open hood. Then you will need to pull the front fascia off to install the Street Scene Grille Ducts. To do this after opening the hood across top of fascia you will need to remove the 10MM bolts and 6 push in fasteners. Then there are two more bolts on the bottom of fascia. See photos below.

TOOL LIST	
10MM Socket, Ratchet Torx-20, Flat Blade Screwdriver,	

PARTS LIST			
1	Grille Ducts Pair	1	Instruction Sheet
6	Phillips Head Screws	1	Urethane Prep Sheet
6	Tinnerman Nuts	1	Billet Insert Grille
		2 PKGS	3M Adhesion Promoter
		4 FT	1/2" Two Sided Tape # 75344

Installation.
We recommend you install Splitter, Air Ducts, and the Grilles at the same time. That way you only have to pull the fascia off one time.

NOTE:
Check fit all body parts PRIOR to paint. Follow urethane prep instructions before painting. Take your time and pre-fit all pieces so that they will have a tight fit to the body.

NOTE:
VERY IMPORTANT! Read and understand all directions and check the following parts list before starting installation.

NOTE: Fit all parts before painting (See Special Instructions For Paint Prep.) Parts that have been installed, preped, or painted are not returnable.


INSTALLATION INSTRUCTIONS

STREET SCENE EQUIPMENT, INC.
365 McCormick Avenue
Costa Mesa, Ca. 92626
Phone (714) 426-0590 Fax (714) 426-0591



950-80224
CHEVY CAMARO
2010
LOWER DUCTS PAINTED
WITH BILLET INSERT


4. Now unplug the lights and place the front fascia on a soft cover bench. Hold the Street Scene Splitter in place to see where it will be installed. You will need to clean with the 3M Promoter where the two sided tape will be used. Both the Splitter and the bottom of fascia will need to be cleaned.

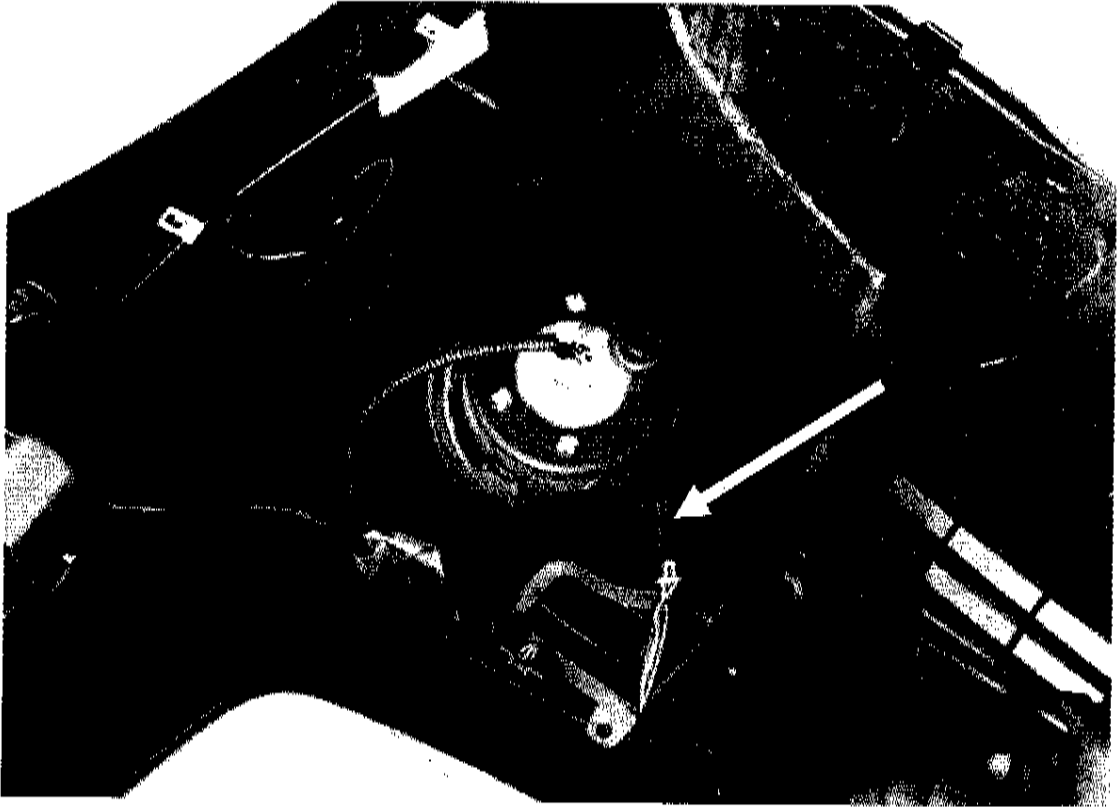

3. Slide off the front fascia but you will to un-plug the wires for the lights. See photo below.




2. Next on the inside of the wheel well there will be 3 screws on each side. Use a Torx20 to remove. Then pull open splash guard open. There will be one 7MM bolt and 3 more 10MM bolts. You will have to reach in to remove. See photos below

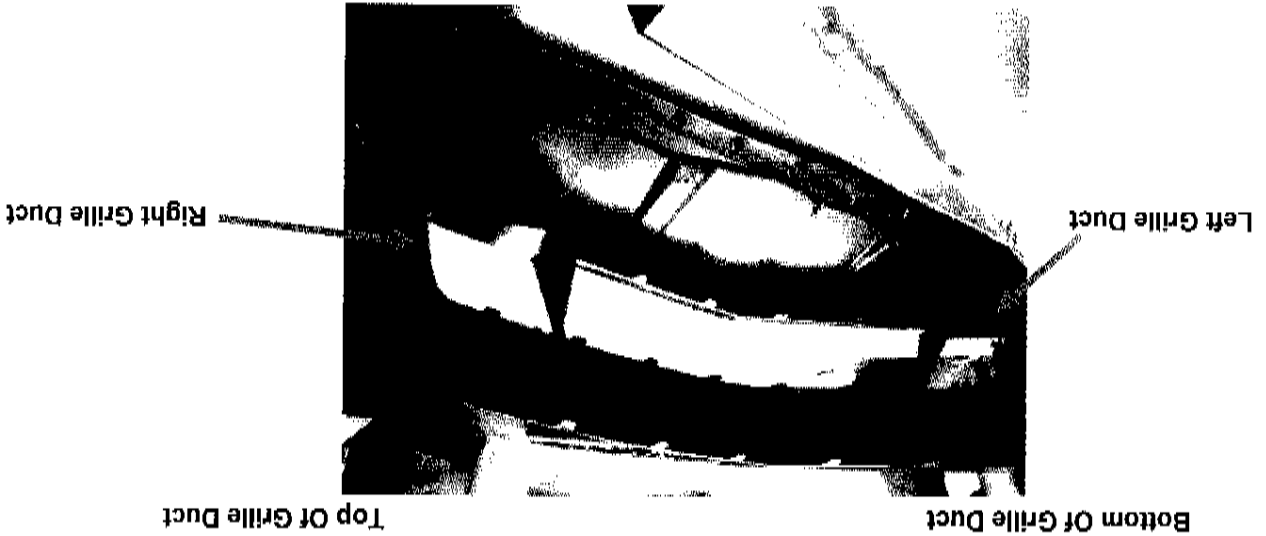

- 7. Next is to install the grille ducts, You only will have to use the two sided tape for this. See below for tape line.
- 6. The lower valance stock grille will just pull out by unfastening the mounting tabs.

STOCK LOWER GRILLE INSERT


GRILLE SUPPORT

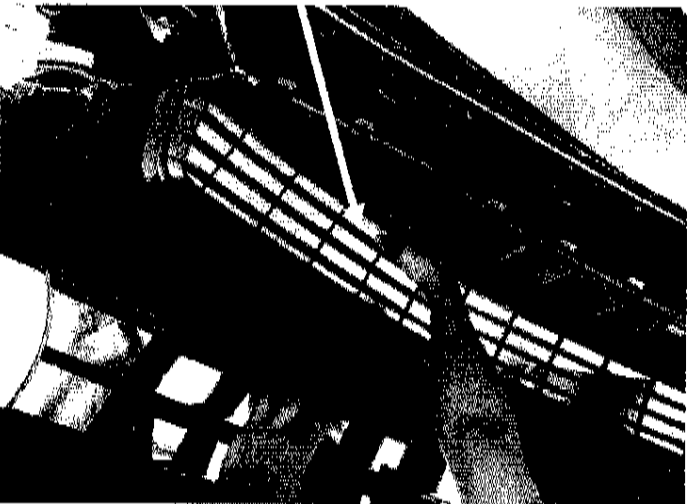

5. Now you will need to remove the grille support and the lower stock grille insert. See photo below.

8. Now your ready to install fascia back onto the vehicle in reverse order as you took off.


MOUNTING TABS

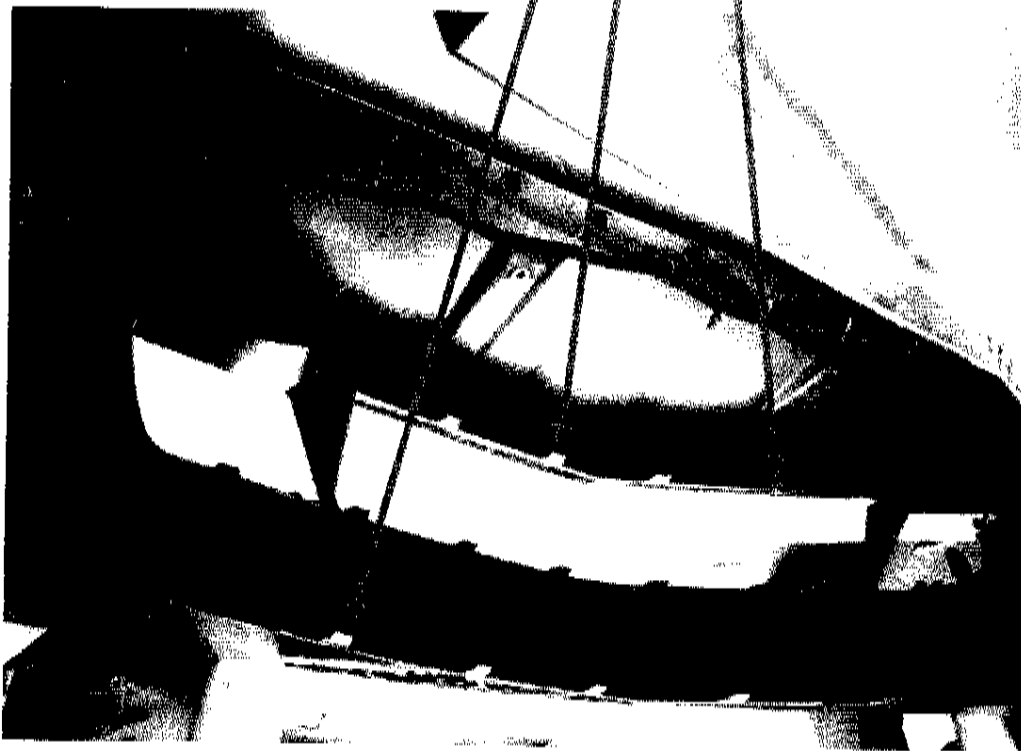

8. After you install the air ducts you will need to install the billet grille between them. Just set the insert in place and mark the mounting holes and use the hardware provided the phillips screws and tinnerman nuts. You will mount it to the fascia you will see some tabs that stick out on the back side.

11/02/09 SSE 950-80223

2. Now you need to place your billet insert into the hole while sliding the toggle thru the grille shell, then center and tighten.

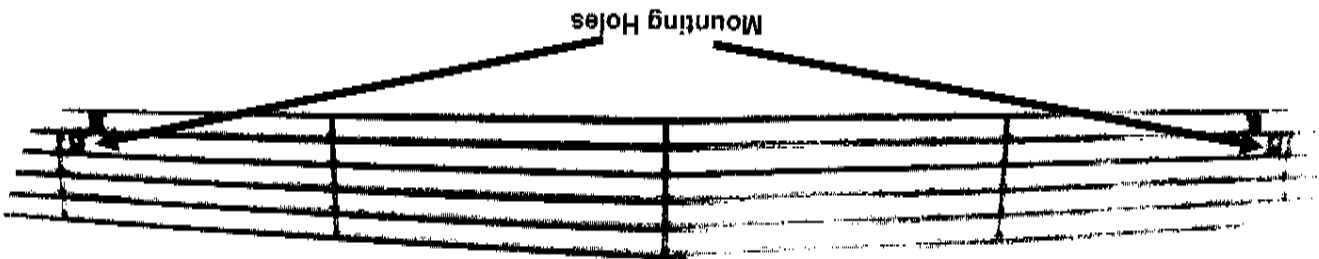

1. Open your grille insert and place the two toggle bolts into place on the grille insert mounting holes. Un-screw the bolt from the toggle and place in the mounting hole from the front side. Next place the toggle back on the bolt on the back side of insert.

Phillips Screwdriver	
TOOL LIST	

PARTS LIST			
1	Billet Insert	1	Instruction Sheet
2	Toggle Bolts		

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

INSTALLATION INSTRUCTIONS

STREET SCENE EQUIPMENT, INC.
 365 McCormick Avenue
 Costa Mesa, Ca. 92626
 Phone (714) 426-0590 Fax (714) 426-0591



950-80223
 2010
 CHEVY CAMARO
 V-6 LOWER VALANCE GRILLE
 INSERT BILLET