





Camaro SS (LS3)






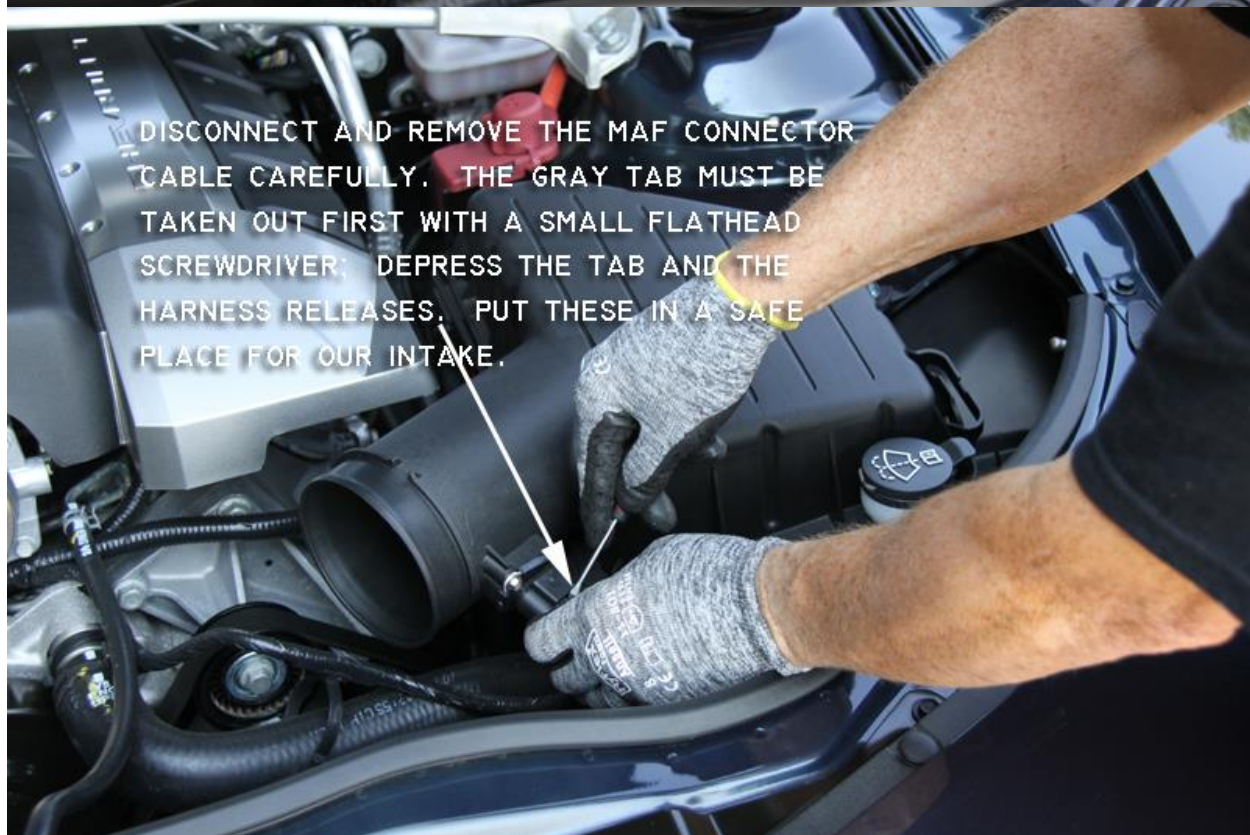

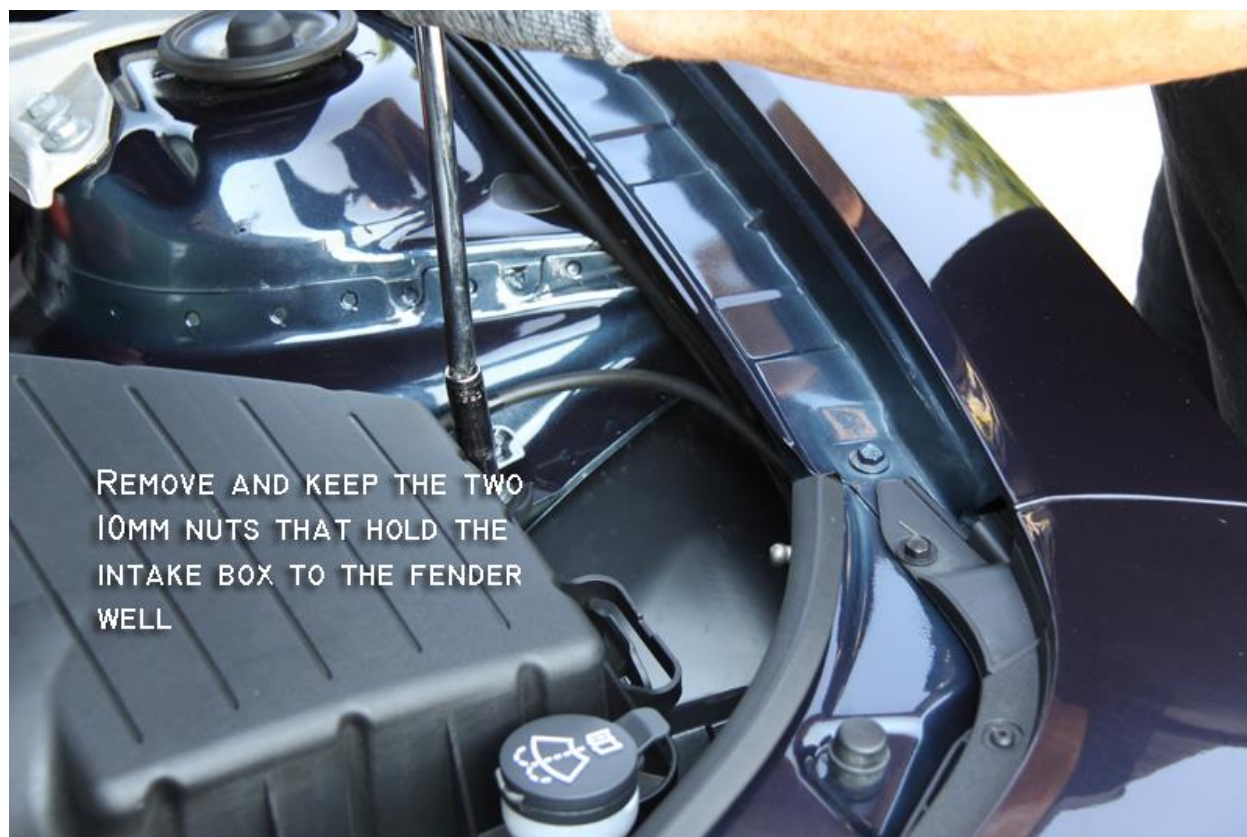

REMOVE AND KEEP THE TWO
10MM NUTS THAT HOLD THE
INTAKE BOX TO THE FENDER
WELL

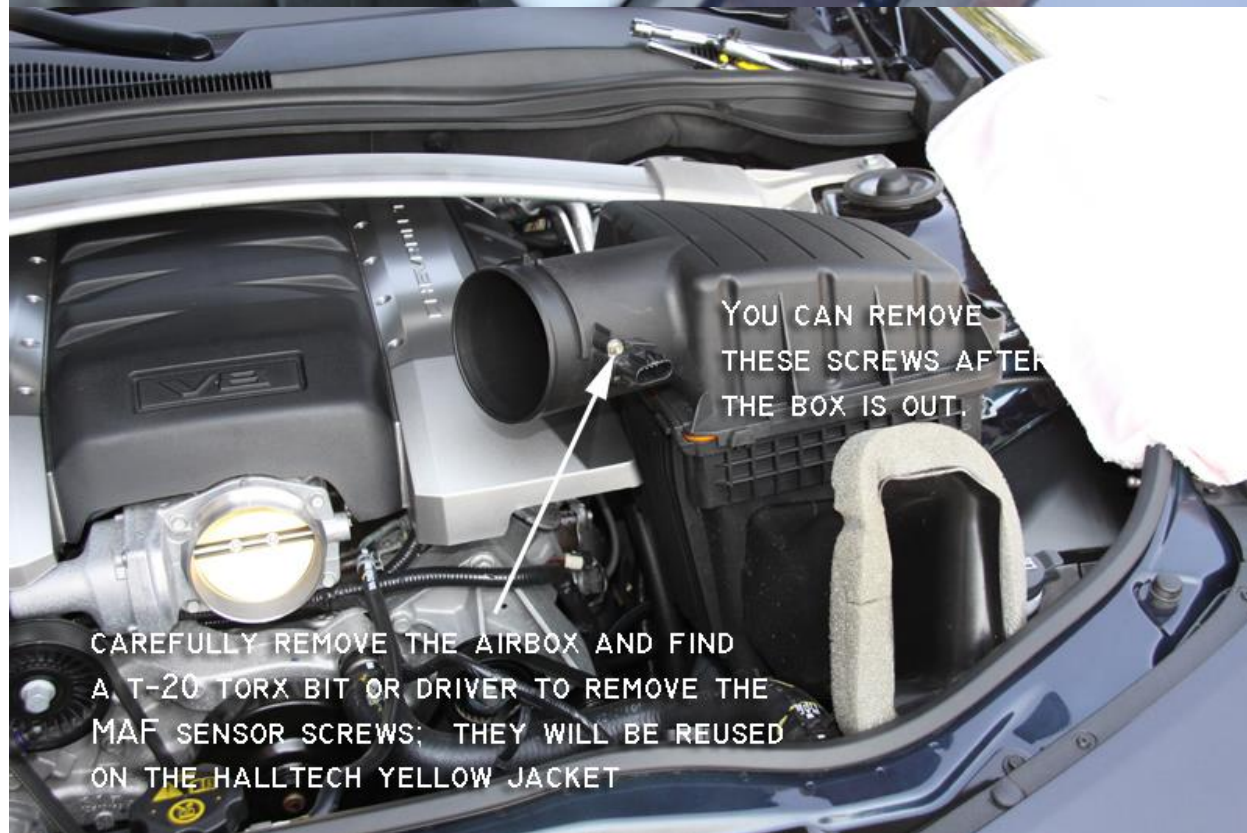

YOU CAN REMOVE
THESE SCREWS AFTER
THE BOX IS OUT.

CAREFULLY REMOVE THE AIRBOX AND FIND
A T-20 TORX BIT OR DRIVER TO REMOVE THE
MAF SENSOR SCREWS; THEY WILL BE REUSED
ON THE HALLTECH YELLOW JACKET




INSTALL THE STOCK MAF SCREWS WITH THE PROVIDED ORANGE SILICONE WASHER ON THE INSIDE OF THE MAF TABS.



PULL THE INTAKE TUBE THROUGH THE HEATSHIELD BEFORE INSERTING THE MAF SENSOR

THERE IS A CUTOUT ON THE BOTTOM OF THE SHIELD TO ALLOW THE MAF BOSS CLEARANCE

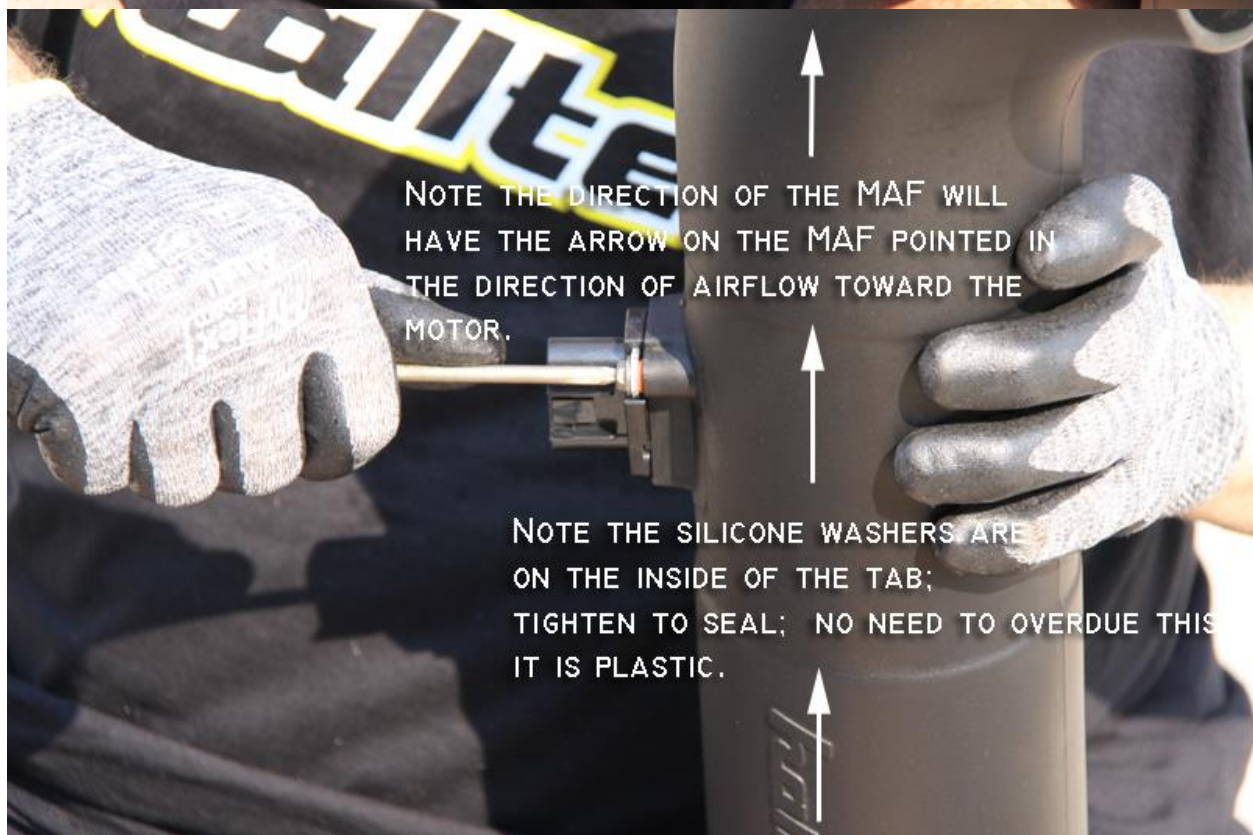



MOUNT THE BRACKET HERE
WITH THE 8-32 SCREWS AND
NUTS PROVIDED. LOCTITE BLUE

AFTER INSTALLING THE BRACKET TO THE HEAT SHIELD, USE THE RUBBER GROMMET FROM THE STOCK AIRBOX AND POSITION IT IN THE FIRST HOLE. THEN INSTALL THE METAL WASHER SLEEVE FROM THE STOCK AIRBOX.

SLIDE OVER THE STUD IN THE FENDER WELL AND TIGHTEN WITH THE NUTS YOU KEPT



DON'T FORGET THE METAL SLEEVE (NOT SHOWN)



REUSE THE STOCK NUT/PLASTIC STANDOFF




INSTALL THE FILTER; TIGHTEN HOSE CLAMP



REMOVE THE OIL CAP (COVER WITH A CLOTH TO KEEP PARTS OUT) THEN REMOVE THE ENGINE COVER

THIS PCV LINE MUST BE CUT OFF AND OUR 5/16" LINE ATTACHED LIKE SHOWN

PUSH THE RUBBER HOSE ONTO THE PLASTIC PCV LINE

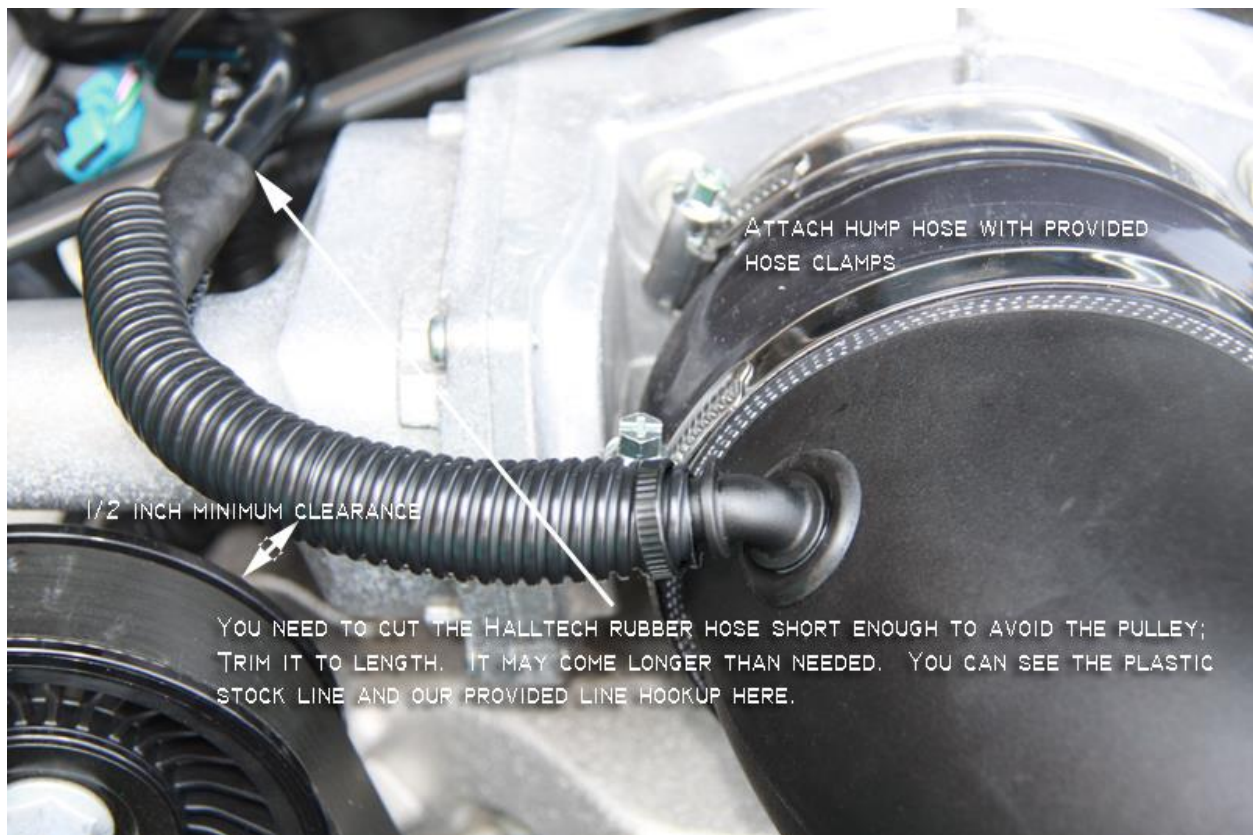




JIM HALL SITTING (THIS IS A GRATUITIS PICTURE HAVING NOTHING WHATSOEVER TO DO WITH
INSTALLATION)



On some later model Camaros, the AC line may push against the heat shield at the bottom;
Don't bend the AC line or damage could result. We do not recommend this be done.

RPM/HP/TQ/AF1/ManP/AF2/Spd/ET/Cor

09-19-10 Camaro stock3, 09-19-10 HALLTECH PLASTIC1,

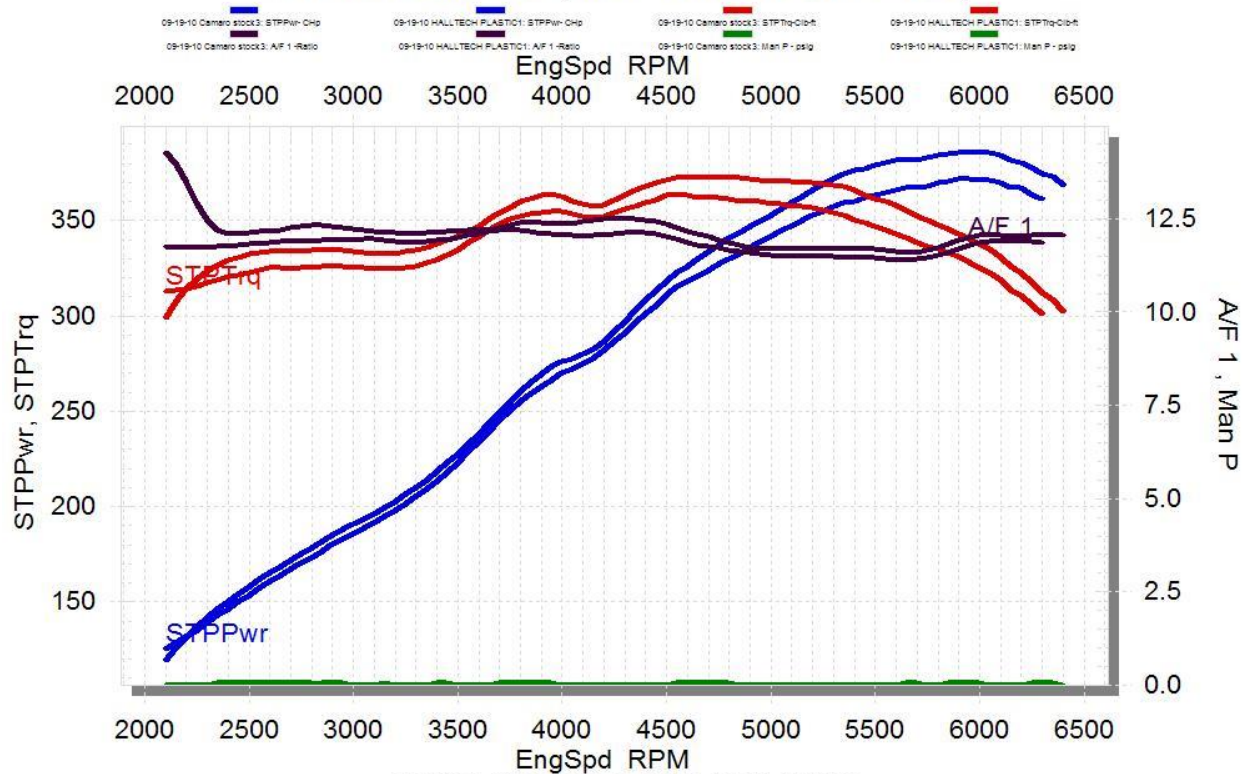

09/20/10

JANNETTY RACING CUSTOM TUNING
SuperFlow WinDyn™ V2.3

11:11:42

Corrected Data

C2-9340, C2-9336, C2-9335,

Halltech Yellow Jacket Halltech Bumble Bee STOCK

C2-9340: STPTrq-Clb-ft
528hp 476tq


C2-9336: STPTrq-Clb-ft
530hp 477tq

C2-9335: STPTrq-Clb-ft
517hp 464tq

C2-9340: STPPwr- CHp

C2-9336: STPPwr- CHp

C2-9335: STPPwr- CHp

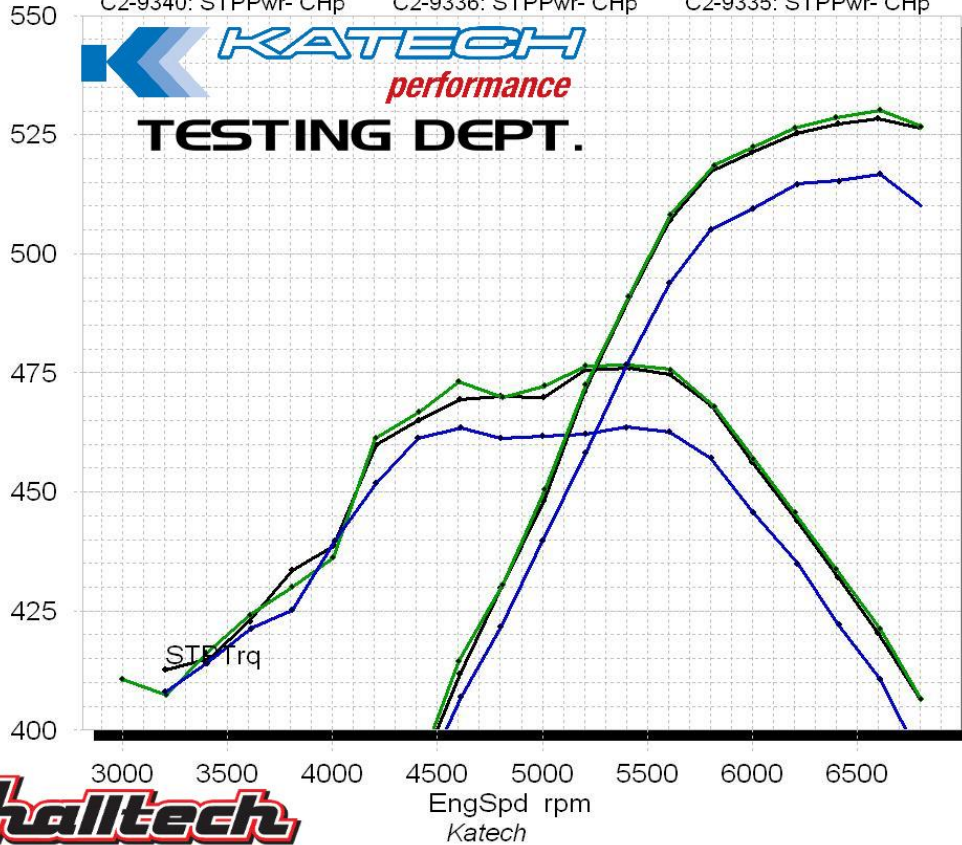

halltech

05/05/11

SuperFlow WinDyn™ V2.3

14:26:43

Bee Under the Influence



haltech™

www.haltech



halltech