



# STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue  
 Costa Mesa, Ca. 92626  
 Phone (714) 426-0590 Fax (714) 426-0591

950-70232  
**CHEVY CAMARO**  
 2010  
**SIDE SKIRT KIT**  
**4 PIECE URETHANE**

## INSTALLATION INSTRUCTIONS

**NOTE: Fit all parts before painting ( See Special Instructions For Paint Prep. ) Parts that have been installed, preped, or painted are not returnable.**

**NOTE:**

**Check fit all body parts PRIOR to paint. Follow urethane prep instructions before painting. Take your time and pre-fit all pieces so that they will have a tight fit to the body.**

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Front Left	1	Instruction Sheet	<b>25 FT.</b>	1/2" Two Sided Tape # 75344
1	Front Right	1	Urethane Prep Sheet	<b>5 PKGS</b>	3M Adhesion Promoter
1	Rear Left				
1	Rear Right				


TOOL LIST
Phillips Screwdriver, Sanding Paper, Drill Motor, 3/16 Drill Bit

1. First you will need to pull off the stock side skirts from vehicle. To do this there is two screws in the front wheel well and the rear wheel well that need to be removed Note **SAVE ALL HARDWARE**
2. Next you need to pop the old side skirt off by pulling from the bottom then pull away from the vehicle. See photo below.



3. Next is to get the parts ready to install, You need to sand the tape edge good and then clean with the 3M promoter provided. Below is a photo of the tape lines on the side skirts.

**TWO SIDED TAPE HERE**

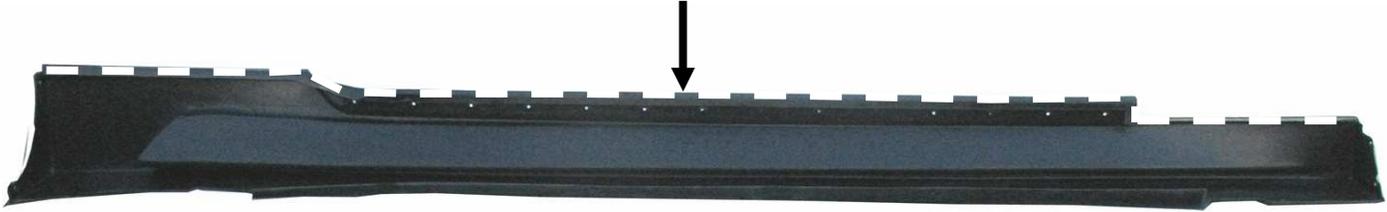

**TWO SIDED TAPE HERE**



4. Next hold the side skirt in place to see where the tape line is. You will need to clean again with the 3M promoter so the two sided tape will stick good.
5. Lift the corners of the tape backing on the ends. Apply pressure to the side skirt. Begin pulling off the tape. See photo below.



6. After you get the side skirt on in the wheel wells pull around the ends and re-install the two screws in the front and two in the rear of the side skirt.

7. Next you need to get the stock side skirt and remove the door seal on the top edge of side skirt. See photo below for removal of door seal.



8. Next you need to open the door and get ready to install the door seal on to the Street Scene Side Skirt. You will see all of the holes in line. Drill out with a 3/16 drill bit, then you can install the door seal. See photo below.

