

54433

54434

11-12

Chrysler 300C



54433

54434

11-12

Chrysler 300C

## 11-12 CHRYSLER 300C

### Upper Class Mesh Grille

Install time: 30 Mins.

#### TOOLS REQUIRED:

Plastic Prybar  
10mm & 7mm Socket Wrench  
3/16 Drillbit & Drill  
Screwdriver

#### PARTS LIST:

(1) Mesh Grille  
(4) #8 Flat Nuts  
(4) 6/32 Nylon Lock Nuts  
(4) 3/4 #8 Screws  
(4) 10/32 Fender Flatwashers




PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

#### Step 1 Factory Grille Shell Removal

- Remove 8 clips on the Plastic Cover. (Fig. 1)
- Carefully pull on Grille Shell to remove part of the Plastic Cover. (Fig. 2)
- With a Plastic Prybar Unclip the Plastic Cover from the Factory Grille Shell. (Fig. 3)
- Remove Plastic Cover. (Pull Grille Shell Carefully outward if Plastic Cover doesn't come off.)
- Remove 2 clips on side Fender Well. (Fig. 4)
- Remove 10mm Bolt on the inner Fender. (Fig. 5)
- Pull Side Fender outward to Unclip. (Fig. 6)
- Remove 8 (7mm) Screws from Underneath the Factory Grille Shell. (Fig. 7)
- Remove Grille Shell and unclip the Electric Wire from the Fog Lights.

#### Step 2 Factory Grille Removal

- Remove 2 Clips on the Bumper Support. (Fig. 8)

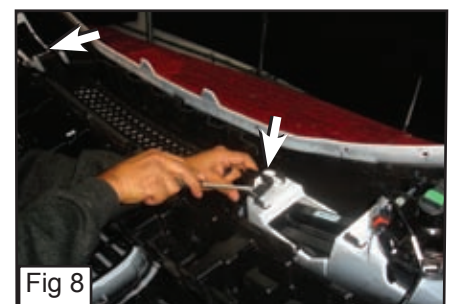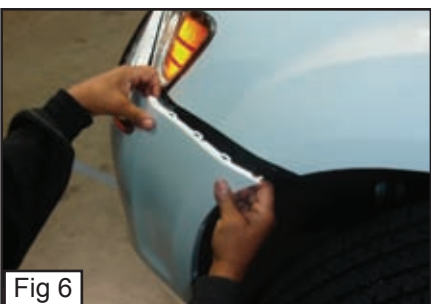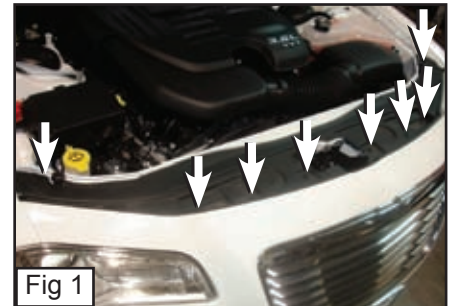

**54433**  
**54434**  
**11-12**

**Chrysler 300C**



**54433**  
**54434**  
**11-12**

**Chrysler 300C**

## **11-12 CHRYSLER 300C**

### **Upper Class Mesh Grille**

- Remove 2 Screws on the corners of the Grille Shell. (Fig. 9)
- Remove 11 Clips around the Grille Shell. (Fig. 10)
- Remove Factory Grille. (grille will come out forward.)

#### **Step 3 Grille Installation**

- Unclip the Factory Grille from around the Chrome Frame. (Fig. 11)
  - Unclip the Chrysler Logo. (Fig. 12)
  - Place Mesh Grille over the Factory Grille Shell. (Fig. 13)
  - Insert 10/32 Fender Flatwashers along the top of the Screws on the Mesh Grille, Tighten with 6/32 Nylon Lock Nuts. (Fig. 14)
  - Drill a 3/16 Hole through the Brackets on the side and bottom of the Mesh Grille. (Fig. 15)
  - Place a #8 Flat Nut on the outer edge on the bracket and thread with a #8 Screw. (Fig. 16)
- Insert the Chrysler Logo through the slots on the Mesh Grille.  
Re-Assemble Bumper Support, Clips and bolts.

**Installation Complete**



Fig 9

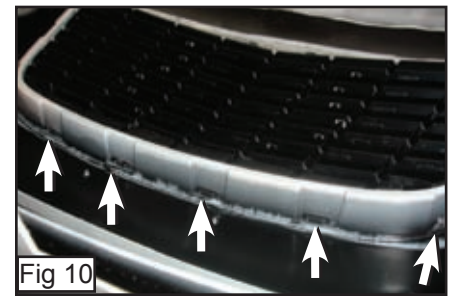


Fig 10



Fig 11



Fig 12



Fig 13

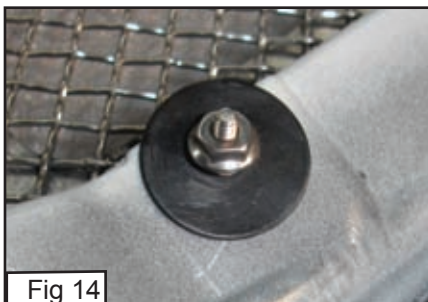


Fig 14

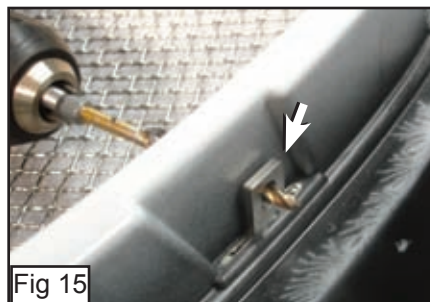


Fig 15

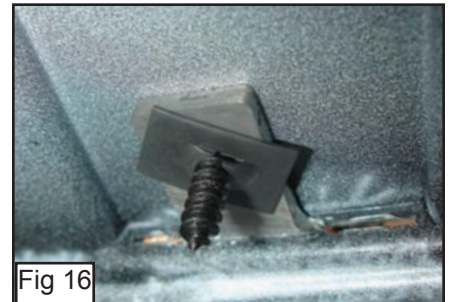


Fig 16